

SENSORS

RELIABILITY STARTS WITH PRECISION



2025

ABSEL SKU	Product name	OEM ref #
ES 150 001	Camshaft position sensor	137386, 95560610620, 95860610600, 95860610601, 95860610620, 06H905163A, 06H905163B, 07L905163, 07L905163A, 07L905163B, 07L905163C, 6H905163A, 6H905163B, 7L905163, 7L905163A, 7L905163B, 7L905163C
ES 150 002	Crankshaft position sensor	131830, 2501830, 391802B000, 391802B100
ES 150 004	Crankshaft position sensor	131809, 2501809, 3918022600, 3918026900
ES 150 005	Crankshaft position sensor	138185, 3918025200, 3918025300
ES 150 009	Crankshaft position sensor	25182450, 25198942, 96253542, 96434780
ES 150 012	Camshaft position sensor	138102, 2508102, A29690BA0, CPS0001, U11N01REVS, WA29630B24WWW, 237314M500, 237314M502, 237314M505, 237314M506, 237314M50A, 237314M50B, 237314M560, 237315M000, 237315M001, 237315M005, 237315M006, 237317Y000, 237317Y001, 2373195F0B, 2373195F0D, 23731AJ616, 23731AL615, 23731AL616, 23731AL61A
ES 150 013	Crankshaft position sensor	04402560, 09110560, 4402560, 9110560, 93191317, 138114, 138132, 2508132, 0143600QAB, 2375000QOH, 2375000QAH, 7700101970, 7700103069, 8200468645, 8200647554
ES 150 018	Crankshaft position sensor	1110834, 1473035, 6M5G6D298BA, YS6A6C315AB, 138129, C20118221, C20118221Z01, 30711660, 30711660A
ES 150 022	Crankshaft position sensor	1062545, 1066383, 1079388, 1085854, 1087548, 98AB9E731AC, 98AB9E731AD, 98AB9E731AE, 98AB9E731AF, 98AB9E731AG, C20221551, C20221551Z01, DDD117400
ES 150 023	Crankshaft position sensor	391802F000
ES 150 028	Crankshaft position sensor	8200772182
ES 150 030	Camshaft position sensor	04415077, 04420249, 04421645, 093167895, 093179803, 095507625, 4415077, 4420249, 4421077, 4421645, 93167895, 93179803, 95507625, 138167, 2508167, 2263000QAG, 237319576R, 23731BN701, 23731DB000, 23731DB00A, 2376000QAB, 2376000QAD, 7701058077, 8200033686, 8200285686, 8200285798, 8200285798E, 3322084A00, 3322084A00000, 3322084A10, 3322084A10000
ES 150 031	Crankshaft position sensor	131819, 2501819, 2709050043, 2709050600, 2709051300, A2709050043, A2709050600, A2709051300
ES 150 033	Crankshaft position sensor	138161, 2508161, CPS0067, CPS8161HUD, 06A906433G, 06A906433L, 06A906433N, 6A906433L
ES 150 035	Crankshaft position sensor	137365, J005T26273, J5T26273, MR420734
ES 150 036	Camshaft position sensor	12141435351, 12141438082, 12147506273, 12147518628, 1435351, 1438082, 1438082F, 7506273C, 7518628, 131882, 2501882
ES 150 037	Camshaft position sensor	138103, 2508103, A29690CA0, CPS0002, U11N02REVS, WA29640C22WWW, 237315M010, 237315M015, 237315M016, 237316J900, 237316J902, 237316J905, 237316J906, 237316J90A, 237316J90B, 237316J90C, 237316J960, 237316J966, 237316J96B, 7701060599
ES 150 038	Crankshaft position sensor	05080350AA, 05080352AA, 5080350AA, 5080352AA, DS05080352AA, K05080350AA, K05080352AA, 138119, 2508119, 0031532728, 0031532828, 31532728, 31532828, 6519050000, A0031532728, A0031532828, A31532728, A6519050000, MN960274, MN960372
ES 150 041	Camshaft position sensor	3935022600
ES 150 045	Camshaft position sensor	137385, 95560610610, 030907601, 030907601B, 030907601C, 030907601D, 030907601E, 030907601F, 030907901D, 03D907601, 03D907601A, 090307601E, 3D907601A
ES 150 048	Camshaft position sensor	3808900J77, A113611011, 05066856AA, 05066856AB, 05140332AA, 5066856AA, 5066856AB, 5140332AA, K05066856AB, K05140332AA, 1920JH, 3611040RAA, 112685, 46798367, 46798369, 504048261, 55187973, 1247810, 1319158, 1826557, 1905522, 3781020A01, 4M5G12K073AA, 4M5G12K073AB, 4M5G12K073AC, 4M5G12K073AD, BE826B288A, 093183528, 471Q2L3813801, 6235685, 6235715, 93183528, 93186840, 93310500, 93347211, 3612010E06, 131897, 2501897, 3930027400, 80891260, 80891268, LR000634, LR052493, LR058405, PW812666, 0305CC0011N, MN180307, 2P0133491
ES 150 049	Camshaft position sensor	131876, 2501876, 9091905060
ES 150 052	Crankshaft position sensor	04421099, 093862464, 4421099, 93862464, 8200746509
ES 150 054	Camshaft position sensor	025195556, 055565709, 06235752, 1249112, 25195556, 55565709, 6235752
ES 150 060	Camshaft position sensor	131856, 2501856, 0051535928, A0051535928, MR985041
ES 150 062	Camshaft position sensor	05080346AA, 5080346AA, 5175762AA, K05080346AA, 138131, 2508131, 0031539726, 0031539728, 0051531328, 31539728, 51531328, A0031539726, A0031539728, A0051531328
ES 150 067	Crankshaft position sensor	5175763AA, 5175763AB, 68039478AA, 68039478AB, 68039478AC, K68039478AA, K68039478AB, K68039478AC, 131817, 2501817, 0041538728, 0729050000, 2729050000, 41538728, 6421530728, 6429050000, A0041538728, A2729050000, A6421530728, A6429050000
ES 150 068	Camshaft position sensor	13627566052, 13627570191, 13627588095, 7566052, 7570191, 7588095, 1920LS, V755079880, V756605280, V757019180, V758809580, 131884, 2501884
ES 150 069	Crankshaft position sensor	131827, 2501827, 1865A126
ES 150 070	Crankshaft position sensor	4762QA3611200, 138080, 2508080, 032906433, 032906433A, 032906433B, 036906433D, 03C906433A, 03C906433B, 03C906433E, 045906433B, 32906433, 32906433A, 32906433B, 36906433D, 3C906433A, 3C906433B, 3C906433E, 45906433B
ES 150 071	Crankshaft position sensor	131822, 2501822, 9091905070, 90919A5004
ES 150 073	Camshaft position sensor	12728523317, 13627525014, 13627546660, 13627558518, 13627594040, 13627633958, 13627729480, 7525014, 7546660, 7558518, 7594040, 7633958, 8523317, 131883, 2501883
ES 150 074	Crankshaft position sensor	1920LV, 9662221580, 1143723, 2S706C315AC, 2S706C315AC, 2S706C315AC, 138130, 2508130, JD61138, LR004396
ES 150 075	Camshaft position sensor	94856807, 94859443, 131863, 2501863, 9008019014, 9091905026, 9091919014
ES 150 077	Camshaft position sensor	237313LM1A, 23731EN215, 23731EN22A, 7701065380
ES 150 078	Crankshaft position sensor	12140148889, 12142295386, 12142296181, 12142296182, 12142336620, 12147503140, 13627548994, 7503140, 7548994, 131804, 2501804
ES 150 079	Camshaft position sensor	6711530428
ES 150 080	Crankshaft position sensor	237311KT0A, 23731ED001, 23731ED01A
ES 150 084	Crankshaft position sensor	131831, 2501831, 37500PNC006, 37500RAAA01, J5T30172
ES 150 087	Crankshaft position sensor	096325868, 96325868
ES 150 088	Crankshaft position sensor	3322077E00, 3322077E00000
ES 150 089	Crankshaft position sensor	19316366, 237311VA0A, 23731EN20A, 7701065378, 7701068388
ES 150 090	Crankshaft position sensor	1119150, 1129988, 1S7F6C315AA, 1S7F6C315AD, 1S7F6D315AA, 1S7FGC315AD, 138174, 2508174, 1F2067082, 1F2067082A, LF0118221, 30658179, 31422276
ES 150 097	Crankshaft position sensor	131792, 2501792, ZJ0118221
ES 150 104	Crankshaft position sensor	1920AW, 96374659, 9637465980, 96399998, 9639999880, 137376
ES 150 105	Camshaft position sensor	137388, 036907601, 036907601A, 036907601B, 036907601C, 036907601D, 036907601E, 36907601, 36907601A, 36907601B, 36907601C, 36907601D, 36907601E

ABSEL SKU	Product name	OEM ref #
ES 150 110	Camshaft position sensor	131894, 2501894, 95890760100, 9A790760100, 04C907601, 04C907601A, 04C907601K, 4C907601, 4C907601A
ES 150 113	Crankshaft position sensor	19207P, 96334757, 9633475780, 137373
ES 150 115	Crankshaft position sensor	137387, 2507387, MN980249, MN980339, MN980415, 036906433, 036906433A, 036906433E, 045906433A, 36906433, 36906433A, 36906433E, 45906433A
ES 150 119	Crankshaft position sensor	138159, 2508159, 071957147, 078906433A, 71957147, 78906433A
ES 150 122	Crankshaft position sensor	070907319, 70907319
ES 150 124	Crankshaft position sensor	9675323280, 9803788880, 1717564, 1744454, 1808524, 2011482, BK216C315AA, BK216C315AB, BK216C315AC, 131803, 2501803
ES 150 125	Crankshaft position sensor	6602998, 6740816, 6859705, 928F6C315A1E, 928F6C315A1F, 92BF6C315A1E, 92BF6C315A1F, 948F6C3151E, 948F6C315AA, 94BF6C315AA, F5RZ6C315A, F5RZ6C315AA, 138127, 1E0018221, YF0918221
ES 150 128	Camshaft position sensor	55352609, 01247862, 024405977, 055352609, 06235697, 06238241, 1247862, 24405977, 2519220, 25192205, 6235697, 6238241, 131859, 2501859
ES 150 147	Crankshaft position sensor	06E906433, 6E906433
ES 150 153	Crankshaft position sensor	1371654, 1727897, 6M5G63C315AA, 6M5G6C315AA, 6M5G6C315AB, 30713485, 31331765, 8627355
ES 150 158	Crankshaft position sensor	138184, CPS8184HU, 6M866C315, 6M8G6C315, L3G218221, L3K918221A, J005T32371, J5T32371
ES 150 183	Crankshaft position sensor	0K30A18891, 0K30A18891
ES 150 187	Speed sensor	9944264, 1006990, 1094772, 95VW7F293AA, 95VW7F293AB, 95VW7F923AA, 95VW7F923AB, 086927321, 095927321, 095927321A, 095927321C
ES 150 197	Crankshaft position sensor	05066833AB, 055354601, 06238095, 06238109, 090532619, 09118368, 093179850, 4213840, 45962068F, 5066833AB, 55354601, 6238050, 6238095, 6238109, 90532619, 9118368, 93179850, 138115, 0000504096645, 0005010412449, 5010412449, 504096645, 51271200016, 51271207035, 51271207037, 51271207038, 639366, 7420513343, 7421426987, 20513343, 21426987
ES 150 202	Camshaft position sensor	138071, 2508071, 37510PNA003, 37510PNB003
ES 150 210	Crankshaft position sensor	138177, FSD18221, ZL0118221, ZL0118221A, J005T27072, J5T27072
ES 150 220	Crankshaft position sensor	13627787192, 13627809334, 7787192, 7809334, 131885, 2501885
ES 150 237	Camshaft position sensor	131850, 2501850, 06E905163
ES 150 252	Crankshaft position sensor	137397, 037906433A, 037906433B, 037906433C, 37906433A, 37906433B, 37906433C
ES 150 259	Crankshaft position sensor	01238228, 06238377, 090506103, 09174621, 1238228, 6238377, 90506103, 9174621
ES 150 312	Crankshaft position sensor	37500R40A01
ES 152 002	Oxygen sensor	06A906262BR
ES 152 004	Oxygen sensor	2269000Q0A, 2269000Q0J, 2269000Q1G, 8200461432, 8200495791, 8200556133, 8200632270, 8201035691
ES 152 019	Oxygen sensor	392102C100, 392102G150
ES 152 027	Oxygen sensor	71748280, 0855358, 0855426, 0855554, 55210300, 55353811, 55353812, 55566650, 855358, 855422, 855426, 855553, 855554, 9202577, 93185456, 93185493
ES 152 038	Oxygen sensor	11787548961, 1618V3
ES 152 040	Oxygen sensor	6001549061
ES 152 048	Oxygen sensor	Z60118861, Z60118861A
ES 152 057	Oxygen sensor	1588A020, 1588A081, MD177969, MD319786, MD327611, MD327693, MD329341, MD351752, MD369192, MN137490, MN137944, MR507138, MR507749, MR507750, MR507848, MR514342, MR578114, MR988905
ES 152 072	Oxygen sensor	226902A000, 226902A010, 226908J001, 226912A000, 226918U000, 226A01F701
ES 152 076	Oxygen sensor	88975493, 8946512840, 8946524210, 8946524220, 8946528340, 8946542070, 8946542210, 8946550140, 8946550160
ES 152 079	Oxygen sensor	392102G100, 03L906262E
ES 152 084	Oxygen sensor	135330, 2505330, 036906262D
ES 152 087	Oxygen sensor	11787558055, 7558055, 755805502
ES 152 088	Oxygen sensor	96415640
ES 152 089	Oxygen sensor	36531PNC003, 36531PNDA21, 36531PNFG01, 36531PPA003, 36531PRBA11, 36531PZDA01, 36531PZDA02
ES 152 091	Oxygen sensor	0K01A18861A, 0K08B18861B, 0K2AA18861, 0K2N118861, 0K2NC18861
ES 152 095	Oxygen sensor	036906262AA
ES 152 097	Oxygen sensor	392102G550
ES 152 100	Oxygen sensor	036906262E, 036906262J
ES 152 107	Oxygen sensor	8946506050, 8946508040, 8946508090, 8946512800, 8946533220, 8946548170, 8946548210, 8946548220, 8946563030, 8946568020, 8946568050, 8946574010, 8946574020, 8946574030
ES 152 108	Oxygen sensor	96419957, 3921036760, 3921038015, 3921038225, 3921038405, 3921039650
ES 152 110	Oxygen sensor	12588036, 12617648, 12639693, 12640115
ES 152 124	Oxygen sensor	8946502360, 8946520660, 8946533420
ES 152 136	Oxygen sensor	51801278, 518012780, 55191127, 551911270, 55191128, 55214916, 55214916E, 9S519G444BB, 03L906262A, 03L906262D, 04E906262E, 04L906262A, 06E906265F, 06E906265S, 06E906265T, 4L0906262F, 4L0906262K
ES 152 138	Oxygen sensor	55561425, 55563348, 55568668, 71739859, 855251, 855268, 855510, 93174519, 93181910
ES 152 142	Oxygen sensor	22690AA490, 22690AA510, 22690AA520, 22690AA53B, 22690AA560, 22690AA56A, 22690AA590, 22690AA650, 22690AA69A, 22690AA70A, 22690AA810, 22690AA81A, 22690AA850
ES 152 148	Oxygen sensor	1771995, BV6A9Y460AA, 12571767, 12590111, 855420, 93185453, 93193918, 135300, 2505300, 392102B210, 392102B410, 226A47142R, 022906262CG, 03G906262A, 03G906262C, 03L906262, 059906262, 059906262B, 059906262H, 1K0998262AD, 30650902
ES 152 149	Oxygen sensor	06B906265B
ES 152 156	Oxygen sensor	03H906262C, 06A906262CK, 06F906262S, 079906262G, 1K0998262C, 95860613701, 022906262BT, 1K0998262E
ES 152 159	Oxygen sensor	1618HC, 9665104080
ES 152 160	Oxygen sensor	11787589121
ES 152 167	Oxygen sensor	MR514427

ABSEL SKU	Product name	OEM ref #
ES 152 183	Oxygen sensor	30025549, 1821365J10, 1821365J10000, 1821365J11, 1821365J11000, 1821365J12, 1821365J12000, 1821367D50, 1821367D50000, 1821378K10, 1821378K10000
ES 152 187	Oxygen sensor	11787530736, 135305, 2505305, 0025401817, 0035427318, 0045428818, 25401817, A0025401817, A0035427318, A0045428818, 022906262BF, 06A906262AF, 077906262E, 079906262, 07C906262, 07C906262K, 07C906262L, 07C906262N, 07D906262D, 1K0998262H
ES 152 193	Oxygen sensor	1588A131, 8946502080, 8946505090, 8946512630
ES 152 214	Oxygen sensor	11781433940, 11787513963, 1433940, 7513963, MHK000220, MHK000222
ES 152 216	Oxygen sensor	LF4K18861A, LF4K18861B
ES 152 221	Oxygen sensor	36531PLRA01, 36531PLRA012M2, 36532PNDA01, 36532PNDA11, 36532PNDA21, 36532PRBA01, 36532PRBA11
ES 152 222	Oxygen sensor	0855359, 12619211, 24402859, 24402860, 55574135, 5855393, 855252, 855359, 90570968, 9193654, 92210450, 93189215
ES 152 226	Oxygen sensor	036906262F
ES 152 242	Oxygen sensor	226900Z800, 226900Z801, 226904M805, 226904M815, 226907J500, 226909F600, 226913Y101
ES 152 259	Oxygen sensor	3921002610, 3921002640
ES 152 269	Oxygen sensor	135330, 2505330, 03D906265, 03D906265B, 03D906265C, 06B906265A
ES 152 270	Oxygen sensor	MD336448, MD336490, MN158759, MR560318
ES 154 001	Exhaust Gas Temperature Sensor	01247986, 095517812, 095522108, 1247986, 95517812, 95522108, 2263000Q1E, 2263000Q1J, 226405227R, 8200872039, 8200921749, 8200929533
ES 154 002	Exhaust Gas Temperature Sensor	137005, 2507005, 0009056404, 0081532228, 81532228, 9056404, A0009056404, A0081532228
ES 154 009	Exhaust Gas Temperature Sensor	137025, 2507025, 059906088A, 59906088A
ES 155 001	Mass Air Flow Sensor	135038, 2505038, 222040C020, 222040D030, 222040J010, 2220422010
ES 155 005	Mass Air Flow Sensor	135079, 2505079, AFH6037, MAF0116, 06J906461D
ES 155 008	Mass Air Flow Sensor	135040, 2505040, 222040H010, 222040P010, 222040T010, 2220431010, 2220431020
ES 155 010	Mass Air Flow Sensor	135067, 2505067, L32113215, WLS113215, WLS113215A, ZL0113215, ZLY113215
ES 155 011	Mass Air Flow Sensor	135127, 2505127, 2816427800
ES 155 014	Mass Air Flow Sensor	3L3A12B579BA, 4515688, 135037, 135081, 2505037, 2505081, AFH60M19, AFH60M21, U11FR01AFS
ES 155 015	Mass Air Flow Sensor	1367827, 6G9N9G760AA, 138943, 2508943, 31342364, 8692624, 86926240
ES 155 017	Mass Air Flow Sensor	13621432356, 1432356, 138931, 2508931
ES 155 019	Mass Air Flow Sensor	138357, 138957, 2508957, 1130940048, A1130940048
ES 155 024	Mass Air Flow Sensor	135131, 2505131, 2730940548, 2730940648, 2730940748, 2730940848, 2730940948, A2730940548, A2730940648, A2730940748, A2730940848, A2730940948
ES 155 026	Mass Air Flow Sensor	E5T60171, MR985187
ES 155 028	Mass Air Flow Sensor	0836583, 836583, 90530463, 135099, 138372, 2505099
ES 155 029	Mass Air Flow Sensor	13621438871, 13627567451, 1438871, 7567451
ES 155 031	Mass Air Flow Sensor	6420900048, A6420900048
ES 155 032	Mass Air Flow Sensor	6510900148, A6510900148
ES 155 040	Mass Air Flow Sensor	138959, 2508959, 0000940948, 525428, A0000940948
ES 155 041	Mass Air Flow Sensor	138990, 2508990, 000VT5077, 074906461B, 074906461BX
ES 155 043	Mass Air Flow Sensor	6650943048
ES 155 048	Mass Air Flow Sensor	6450900048, 6519050500, A6450900048, A6519050500
ES 155 069	Mass Air Flow Sensor	0000940048, A0000940048
ES 155 078	Mass Air Flow Sensor	0000943448, 0040943448, A0000943448, A0040943448
ES 155 089	Mass Air Flow Sensor	1051277, 1054419, 1054420, 98AB12B579B1B, 98AB12B579B2B, 98AB12B579B3B, 135094, 2505094, AFH6013
ES 155 093	Mass Air Flow Sensor	05117501AA, 53013673AA, K53013673AA, 0000942248, 0000943248, A0000942248, A0000943248, 2E0906461C
ES 155 120	Mass Air Flow Sensor	138975, 2508975, 038906461, 038906461X
ES 155 122	Mass Air Flow Sensor	135121, 2505121, 281642A401, 281642A500
ES 155 130	Mass Air Flow Sensor	13621438687, 13627566986, 1438687, 7566986, 138992, 2508992
ES 155 132	Mass Air Flow Sensor	13622247074, 13627787076, 13627787976, 13712247002, 138946, 138974, 2508946, 2508974
ES 155 136	Mass Air Flow Sensor	13627793633, 13627801951, 13627805415, 13628509725, 7793633, 7801951, 7805415, 8509725, 135129, 2505129
ES 155 144	Mass Air Flow Sensor	95860612500, 03H906461A
ES 155 150	Mass Air Flow Sensor	13627524136, 13627566988
ES 155 155	Mass Air Flow Sensor	13627794972, 7794972, 1610874680, 1920GV, 9650010780, 135096, 2505096, 30622124
ES 155 159	Mass Air Flow Sensor	51830257, 135117, 2505117, 504301164, 55220331
ES 261 002	Speed sensor	90375764
ES 261 010	Speed sensor	4262139052
ES 261 019	Speed sensor	94853144, 94855940, 8318112020
ES 420 004	Brake pad wear sensor	34356870353, 6870353
ES 420 005	Brake pad wear sensor	34356792289, 6792289
ES 420 008	Brake pad wear sensor	34356861808, 34356890791, 6861808
ES 420 009	Brake pad wear sensor	34356792292, 6792292
ES 420 010	Brake pad wear sensor	34356861807, 34356890788, 6861807
ES 420 011	Brake pad wear sensor	34356792567
ES 420 012	Brake pad wear sensor	34356791958, 6791958
ES 420 013	Brake pad wear sensor	34356792571, 34356854168, 6792571, 6854168
ES 420 016	Brake pad wear sensor	34356870351, 6870351
ES 420 017	Brake pad wear sensor	1715400617, A1715400617
ES 420 018	Brake pad wear sensor	34356799736, 34356865612, 6799736, 6865612
ES 420 020	Brake pad wear sensor	9065401417, 9065401517, A9065401417, A9065401517, 2E0906206C
ES 420 021	Brake pad wear sensor	34356790304, 6790304
ES 420 024	Brake pad wear sensor	34356790303, 6790303
ES 420 025	Brake pad wear sensor	34356791962, 6791962

ABSEL SKU	Product name	OEM ref #
ES 420 026	Brake pad wear sensor	95861236550, 7P0907637C
ES 420 029	Brake pad wear sensor	34356771766, 34356780699, 34356789505, 6771766, 6780699, 6789505
ES 420 036	Brake pad wear sensor	34356772008, 34356789501, 6772008, 6789501
ES 420 037	Brake pad wear sensor	80A615121A
ES 420 038	Brake pad wear sensor	95B907253
ES 420 039	Brake pad wear sensor	34356762253, 34356789445, 6762253, 6789445
ES 420 041	Brake pad wear sensor	34356759918, 34356764299, 34356768596, 34356776422, 34356789493, 6759918, 6764299, 6768596, 6776422, 6789493
ES 420 043	Brake pad wear sensor	95861236500, 7P0907637A
ES 420 046	Brake pad wear sensor	LR033275
ES 420 047	Brake pad wear sensor	1535358
ES 420 048	Brake pad wear sensor	34356792565, 6792565
ES 420 051	Brake pad wear sensor	0005400217, 1265402017, 1405401217, 6015401317, A0005400217, A1265402017, A1405401217, A6015401317
ES 420 052	Brake pad wear sensor	T4A3216, LR090709
ES 420 054	Brake pad wear sensor	LR033295
ES 420 056	Brake pad wear sensor	LR084048, LR122455
ES 420 057	Brake pad wear sensor	1163065, 2229018, 34351163065, 34352229018
ES 420 059	Brake pad wear sensor	1165580, 34351165580
ES 420 060	Brake pad wear sensor	2115400717, A2115400717
ES 420 063	Brake pad wear sensor	34356792564, 6792564
ES 420 065	Brake pad wear sensor	1164372, 34351164372
ES 420 066	Brake pad wear sensor	34356792561, 6792561
ES 420 067	Brake pad wear sensor	1165579, 34351165579
ES 420 069	Brake pad wear sensor	34356792569, 34356860181, 6792569
ES 420 070	Brake pad wear sensor	1164371, 34351164371
ES 420 071	Brake pad wear sensor	PAB615121, 4G0615121
ES 420 072	Brake pad wear sensor	34353411756
ES 420 073	Brake pad wear sensor	A6395401417
ES 420 075	Brake pad wear sensor	9065401317, A9065401317, 2E0906206B
ES 420 078	Brake pad wear sensor	3411757, 34353411757
ES 420 082	Brake pad wear sensor	34356792559, 6792559
ES 420 083	Brake pad wear sensor	9015400017, 9015400117, A9015400017, A9015400117, 2D0919351
ES 420 085	Brake pad wear sensor	9015400217, 9015400317, A9015400217, A9015400317, 2D0919351A
ES 420 087	Brake pad wear sensor	34356777649, 34356779619, 34356789440, 6777649, 6779619, 6789440
ES 420 089	Brake pad wear sensor	8K0615121, 8T0907637
ES 420 091	Brake pad wear sensor	34356755266, 34356778037, 6755266, 6778037
ES 420 095	Brake pad wear sensor	34356792562, 6792562
ES 420 096	Brake pad wear sensor	34356755267, 34356778038, 6755267, 6778038
ES 420 105	Brake pad wear sensor	SEM000010, SEM000011, SEM000012
ES 420 109	Brake pad wear sensor	C2D2976, WIR5243
ES 420 110	Brake pad wear sensor	34356773008, 34356789502, 6773008, 6789502
ES 420 117	Brake pad wear sensor	34356764851, 34356777650, 34356789441, 6764851, 6777650, 6789441
ES 420 122	Brake pad wear sensor	65259370000, 2N0615437
ES 420 125	Brake pad wear sensor	LR014568, LR019401
ES 420 127	Brake pad wear sensor	97060914500
ES 420 129	Brake pad wear sensor	T4A12867, T4A13370, T4A3467, LR090683
ES 420 131	Brake pad wear sensor	SEM000024, SEM500070
ES 421 001	ABS sensor front	131584, 479100004R, 479109155R
ES 421 002 R	ABS sensor front right	131414, 2501414, 1KD927804, 7H0927804, WHT003856
ES 421 003 L	ABS sensor front left	131413, 2501413, 1KD927803, 7H0927803, WHT003857
ES 421 004 L	ABS sensor rear left	131415, 1K0927807, 1KD927807, WHT003859
ES 421 005 R	ABS sensor rear right	131416, 1K0927808, 1KD927808, WHT003858
ES 421 006 L	ABS sensor front left	131409, 6Q0927803A, 6Q0927803B, WHT003861
ES 421 009 L	ABS sensor front left	131400, 2501400, 1H0927807, 1J0927803
ES 421 011 R	ABS sensor front right	4670A032, 4670A576, 4670A646, 4670A824
ES 421 012	ABS sensor front	131576, 4791100Q0C, 479101292R, 8200195825, 8200419177
ES 421 015 L	ABS sensor front left	4670A031, 4670A575
ES 421 016 R	ABS sensor front right	131410, 6Q0927804A, 6Q0927804B, WHT003860
ES 421 017 R	ABS sensor front right	131401, 2501401, 1H0927808, 1J0927804
ES 421 019	ABS sensor front	1223620, 3M5T2B372AB, 8M5T2B372AA, 9475557, 94755570, 131655, BP4K43701, BP4K43701A, 30748149, 31274611
ES 421 020 R	ABS sensor front right	KMR527312, MR527312
ES 421 024	ABS sensor front	479101DA1A, 47910JG000, 479106421R
ES 421 025	ABS sensor front	01247004, 013329258, 013470637, 06238636, 1247004, 12842463, 13329258, 13412631, 13470637, 6238636, 131632
ES 421 028	ABS sensor front	1356184, 3M5T2B372DA, 131656
ES 421 031 R	ABS sensor front right	598301H300
ES 421 032	ABS sensor front	479101KA0A
ES 421 034 R	ABS sensor rear right	4670A580, MN116244
ES 421 035 L	ABS sensor front left	598101H300
ES 421 037 L	ABS sensor rear left	4670A579, MN116243
ES 421 038 L	ABS sensor rear left	956802S300

ABSEL SKU	Product name	OEM ref #
ES 421 039 R	ABS sensor front right	4670A190
ES 421 040 L	ABS sensor rear left	4670A157, 4670A583
ES 421 045 R	ABS sensor front right	4670A596
ES 421 047	ABS sensor rear	1763976, 1771171, BK212B372BC, BK212B372BD, 131666
ES 421 048 R	ABS sensor rear right	956812S300
ES 421 049 L	ABS sensor front left	KMR527311, MR527311
ES 421 052 L	ABS sensor rear left	479011KA0A, 479013DA0A
ES 421 054	ABS sensor front	47910JN00A
ES 421 058 L	ABS sensor front left	4670A189
ES 421 059	ABS sensor front	479104225R, 479104991R
ES 421 060 R	ABS sensor rear right	956811R000
ES 421 061	ABS sensor front	1371543, 1385797, 1785753, 6C112B372AA, 6C112B372AB, 6C112B372AC
ES 421 062	ABS sensor rear	34526762466, 6762466, 131520
ES 421 063 L	ABS sensor rear left	956801R100
ES 421 065 L	ABS sensor front left	4670A595
ES 421 067 R	ABS sensor rear right	4670A158, 4670A584
ES 421 069 R	ABS sensor front right	1371544, 1383551, 1385799, 1785282, 6C112B372BB, 6C112B372BC, 6C112B372BD, 6C112B372BE
ES 421 076 L	ABS sensor front left	57455SNA003, 57455SNA013, 57455SNA01
ES 421 079	ABS sensor rear	1223622, 1225843, 1481190, 1531487, 2268845, 3M5T2B372BB, 3M5T2B372BC, 3M5T2B372BD, L6001AD, 131652, BP4K43711, BP4K43711A, BP4K43711B, 30648986, 30793635, 31274612
ES 421 093 L	ABS sensor rear left	956801R000
ES 421 096	ABS sensor rear	0025724, 1165535, 34520025724, 34521165535, 34526756376, 6756376, 131503
ES 421 108	ABS sensor front	0025723, 1165534, 34520025723, 34521165534, 34526756375, 6756375, 131501
ES 421 109	ABS sensor front	1182159, 34521182159, 131500
ES 421 111 L	ABS sensor rear left	1371545, 1383552, 1385800, 1785284, 6C112B372CB, 6C112B372CC, 6C112B372CD, 6C112B372CE
ES 421 125 R	ABS sensor rear right	956811R100
ES 421 131	ABS sensor front	1207357, 1698686, 2N112B372AA, 2N112B372AB
ES 421 134 R	ABS sensor front right	598302H300, 598302L300
ES 421 136	ABS sensor front	1164651, 1165609, 34521164651, 34521165609, 131504
ES 421 144 R	ABS sensor front right	956711G000
ES 421 146 L	ABS sensor front left	598102H300, 598102L300
ES 421 149	ABS sensor front	34526752016, 34526756379, 6752016, 6756379, 131517
ES 421 157	ABS sensor rear	4727636AA, 1627162680, 4545F2, 4545H1, 51725100, 51787753, 52057984
ES 421 158	ABS sensor front	131571, 2405400517, A2405400517, 8200043135, 8200296570, 8200346992
ES 421 160 R	ABS sensor front right	57450SNA003, 57450SNA013
ES 421 173	ABS sensor rear	1817686, BK312B372DA, BK322C204A, 131668
ES 421 178	ABS sensor front	4545F1, 51725099
ES 421 190	ABS sensor rear	4545E8, 96536631, 9653663180, 131594
ES 421 241	ABS sensor front	4545G0, 4545H5
ES 421 243	ABS sensor front	131605, 2501605, 1644405141, 1644408339, 1645400917, 1645401617, A1644405141, A1644408339, A1645400917, A1645401617
ES 421 255 R	ABS sensor rear right	68013833AB, 9065401217, A9065401217, 2E0927748C
ES 421 256 L	ABS sensor front left	956701G000
ES 421 270	ABS sensor rear	131604, 2501604, 1644405241, 1644405641, 1645400717, 1649058300, A1644405241, A1644405641, A1645400717, A1645401517, A1649058300
ES 421 274	ABS sensor front	00004545A9, 00004545G6, 00004545G7, 4545A9, 4545G6, 9642687580, 9664699680
ES 421 279 R	ABS sensor rear right	956813J000
ES 421 293 L	ABS sensor rear left	956803J000
ES 421 304 L	ABS sensor rear left	68013831AA, 68013831AB, K68013831AA, 131440, 9065401117, A9065401117, 2E0927748B
ES 421 310	ABS sensor front	1064227, 1093743, 98AG2B372AE, 98AG2B372AF, 131663
ES 421 336	ABS sensor rear	1501675, 1740259, 2071964, 3M5T2B372CB, 6G9N2B372EB, BV6T2C190KA, BV6T2C190KB, 30736634, 30736895, 31423573
ES 421 343	ABS sensor rear	1665400317, 1669052701, 1669054102, A1665400317, A1669052701, A1669054102
ES 421 346	ABS sensor rear	00004545C0, 4545C0, 4545G7, 9642688280, 131562
ES 421 365	ABS sensor front	454588, 96353847, 96386487, 96436596, 96436977, 96449667, 9644966780, 131559
ES 421 956 R	ABS sensor rear right	479001KA0A, 479003DA0A

ABSEL

Power in Motion. Quality in Parts.

HEAD OFFICE



Jebel Ali Free Zone South, Dubai, UAE
+971 50 896 0071
www.absel.com
info@absel.com

MANUFACTURING COORDINATION CENTER



No:19/6 Mahmutbey, Taşocağı Yolu, Entrance C1
Floor:17 Office:52, Bağcılar, 34218 Istanbul, Turkey
+90 (539) 926 93 36 | +90 212 92440 50
info@absel.com

DISTRIBUTION NETWORK

EUROPE | EUROPEAN UNION, TURKEY



Max-Kaiser-Str. 60, 97424, Germany
+49 176 362 250 48
eu-sales@absel.com

SOUTH CAUCASUS | AZERBAIJAN, GEORGIA, ARMENIA



N 263 Rustavi Highway, Krtsanisi district, Tbilisi, Georgia
+995 595 16 16 07
sc-sales@absel.com

MIDDLE EAST AND NORTH AFRICA | EGYPT, JORDAN, ISRAEL, KUWAIT, MAROCCO, LEBANON, TUNISIA, UAE



Jebel Ali Free Zone South, Dubai, UAE
+971 50 896 0071
mena-sales@absel.com



absel.com